

PROGRAMMING INSTRUCTIONS

MAINTENANCE MODE ACCESS

Access the **WL7 FW** maintenance screen by selecting ambient product and tapping the dispense button 5 times within 5 seconds. The maintenance menu will appear as shown below:


To exit the maintenance mode: Tap the dispense button 5 times within 10 seconds.

MAINTENANCE SCREEN



MAINTENANCE MODE

The maintenance mode displays the status of all current program settings and any error codes that may be present. The maintenance screen allows you to reset the filter timer and reset the bottle counter. All other settings are controlled by DIP Switches on the Main PCB. See applicable programming section for details.

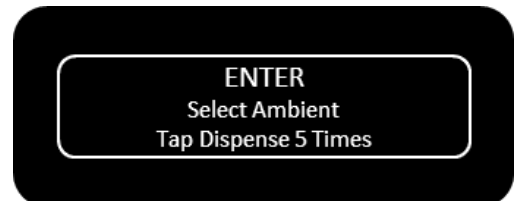

FILTER TIMER RESET

Enter maintenance screen. Press and hold the dispense button for approximately 5 seconds until you hear single beep. The filter icon will flash and the unit will beep one time to confirm timer reset.



BOTTLE COUNTER RESET

Enter maintenance screen. Press and hold the dispense button for approximately 15 seconds until the bottle counter flashes and you hear a double beep. The filter timer will reset after the first 5 seconds and you must continue to hold until dispense until double beep occurs to reset the bottle counter. Bottles Saved display counter will show zero after releasing the dispense button confirming the reset action.

