



PROGRAMMING INSTRUCTIONS

PROGRAMMING STATUS

WL7 FW programming status is displayed in the maintenance screen as shown below:

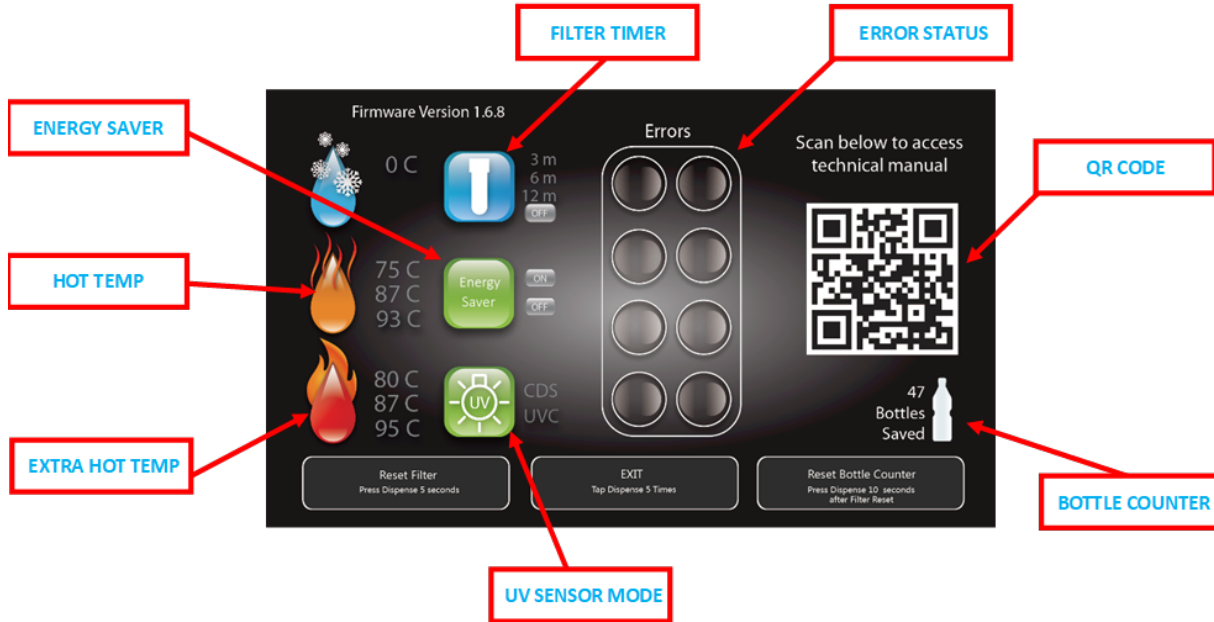

WL7 FW programming is controlled using Dual Inline Package (DIP) Switches located on the Main PCB on the left side of the unit.

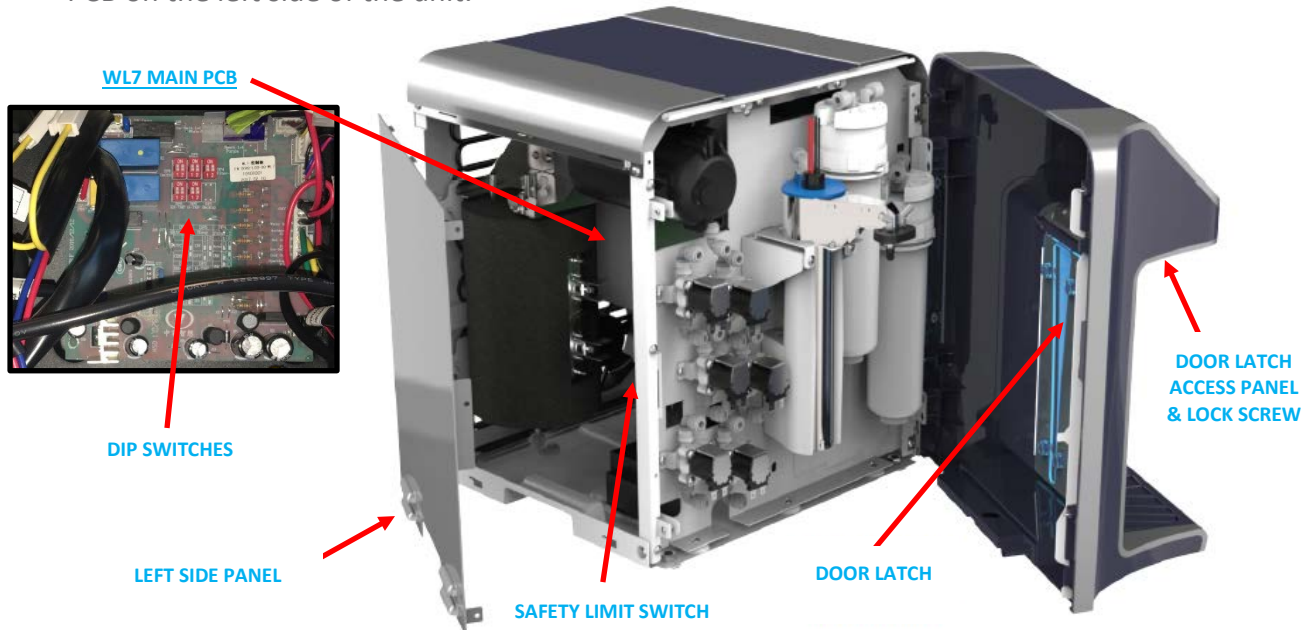

ACCESS MAIN PCB:

Remove safety screw near faucet to drop down front door latch access panel. Lift door hinge latch plate up and swing open the front door to access left side panel front retaining screws. Remove 3 front and 2 rear left side panel screws and slide out the panel to access main PCB.