

DISPENSE TROUBLESHOOTING INDEX

1. Irregular / Intermittent Dispensing from One Side
 2. Hot Water Intermittently Forced Out Through the Faucet, or a Dual Stream Out of the Faucet
 3. Dispensing won't stop when not holding the Dispensing Button
 4. Steady Drip out of Faucet
 5. Hot Water or Steam coming out of both the Faucet and the Vent Hole
 6. Hot Water coming out of Faucet Vent Hole
 7. Low Flow of Water
 8. Restricted Flow of Hot Water
 9. Hot Water Drip out of Faucet
 10. Dispenses Hot and Cold Water at the same time
 11. No cold water available
 12. Water does not dispense from unit
 13. No Water is Dispensing from One Side – Cold or Hot
 14. Cold Water dispenses from Faucet and Vent Outlet Simultaneously
 15. Small amount of water periodically dispenses from faucet automatically
 16. Dispense Buttons Stick
 17. Water Stream is at an Angle
 18. Run-On - Water continues to dispense out of faucet after releasing the dispense button
- *Also includes related instruction for Hot Tank Descaling*

1. Irregular / Intermittent Dispensing from One Side

Possible Reason	Solution
Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button “click”.</p> <p>Adjust water pressure to 40-60 psi.</p>
Loose or bad connection on the Front Dispensing PCB or Solenoid Connector	Check that they are connected properly and tightened.
Solenoid	<p>If both the Water Pressure and PCB have been ruled out, then it is the Solenoid.</p> <p>Replace Solenoid.</p>
Dispensing button is broken on PCB	Check PCB for loose or damaged button. Replace PCB as necessary.

2. Hot Water Intermittently Forced Out Through the Faucet, or a Dual Stream Out of the Faucet

Possible Reason	Solution
Mineral deposits on the expansion slot inside the hot tank vent chamber which blocks the normal path of water to expand.	<p>Descale Hot Tank</p> <p><u>See Hot Tank Descaling Instructions that are included further below in this Troubleshooting Section.</u></p>

3. Dispensing Won't Stop When Not Holding the Dispensing Button

Possible Reason	Solution
Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button "click".</p> <p>Adjust water pressure to 40-60 psi.</p>
Bad Display PCB	<p>Replace Main PCB Part Number: WLCP PN 12-8355 / EN-6126-L00-00</p>
Debris in the Solenoid	<p>Inspect Solenoid for debris and clean out as needed.</p>
Dispensing Button Stuck	<p>Dirt or Foreign material is filling the gap around the push-buttons. Inspect the push buttons and clean surrounding area. Inspect faucet assembly inside the unit and clean as necessary.</p>

4. Steady Drip Out of Faucet

Possible Reason	Solution
Debris in Solenoid	<p>Inspect Solenoid for debris and clean out as needed.</p>

5. Hot Water or Steam Coming out of both the Faucet and Vent Hole

Possible Reason	Solution
Improper tubing attachment from the Hot Tank to Faucet or vice versa.	<p>Check that the tubing is connected from Hot Tank Outlets to correct Faucet attachments. Connect tubing to outlets as needed.</p>

6. Hot Water Coming out of Faucet Vent Hole

Possible Reason	Solution
<p>Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.</p>	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button “click”.</p> <p>Adjust water pressure to 40-60 psi.</p>
<p>Improper tubing attachment from the tank to faucet or vice versa.</p>	<p>Verify tubing is connected properly from tank outlets to correct faucet attachments.</p>
<p>Hot Tank outlet hole is scaled over.</p>	<p>Inspect and Descale Tank as needed.</p> <p><u>See Hot Tank Descaling Instructions that are included further below in this Troubleshooting Section.</u></p>
<p>Expansion chamber is not sealed properly.</p>	<p>Replace the Hot Tank.</p>

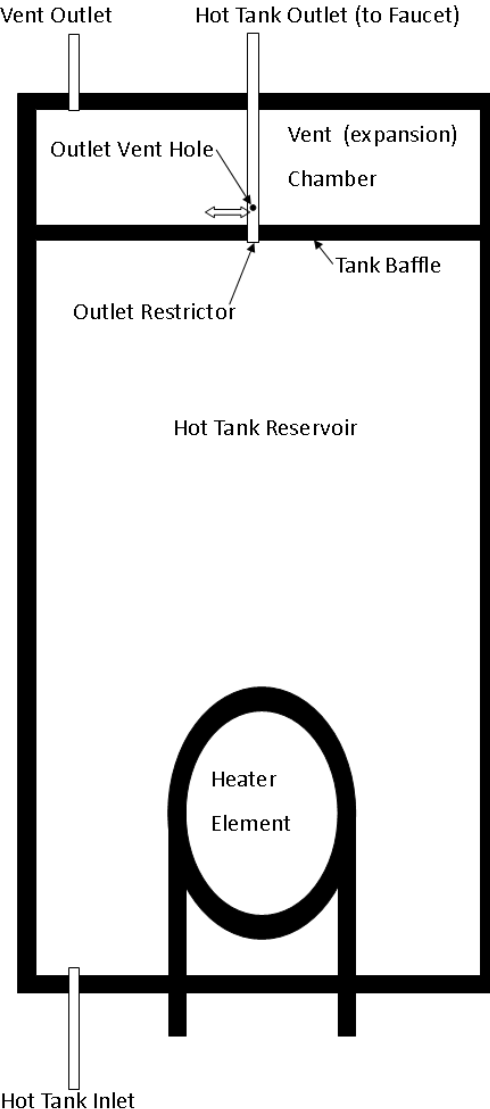
7. Low Flow of Water – Rated Service Flow is 1.89 Liters (0.5 gallons) per Minute

Possible Reason	Solution
Determine Flow of Water	Rated Flow Rate is 1.89 Liters (0.5 gallons) per minute. Check flow rate by dispensing into a container to measure for one minute and measure the amount of water that was dispensed.
Feed Lines too small	Feed lines can restrict flow if run long distances from the supply. It may be necessary to increase the supply line (e.g., use 3/8" feed line vs. 1/4").
Elbows and turns in the feed line	Minimize elbows and turns in the feed line.
Filters	Filters with high pressure drop due to fouling or just by design. Change filters more frequently or go to higher micron size filter for local water conditions.
Restrictions	Follow flow path to ensure there are no undiscovered restrictions due to debris or malfunctioning valves, including the supply valve at the source.
Booster Pump	Add a booster pump to the supply line if the feed is slower than needed.

8. Restricted Flow of Hot Water

Possible Reason	Solution
Partially closed water supply valve to the unit.	Open water supply valve.
Hot Tank outlet hole is scaled over.	Descale Tank. <u>See Hot Tank Descaling Instructions that are included further below in this Troubleshooting Section.</u>
Tubing is creased or has a “kink” in it.	Inspect and replace tubing as necessary.
Faucet nipple screen mesh has obstruction(s)	Unscrew faucet nipple from faucet and remove any obstruction(s) from screen mesh.
Exhausted Filter	Replace the Filter
Solenoid connection to the Display PCB	Turn power off; unplug the WL350 Water Treatment System and visually inspect solenoid connections into the Display PCB. Verify the soldering points on connections are secure into the board. Remove the PCB to inspect the front of the board.
Solenoid Valve is Malfunctioning	Inspect valve components for proper function. Replace as necessary.


9. Hot Water Drip out of Faucet

Possible Reason	Solution
<p>Small Outlet Vent Hole susceptible to scale build up.</p>	<p>Descalc Tank.</p> <p><u>See Hot Tank Descaling Instructions that are included further below in this Troubleshooting Section.</u></p>
	<p>All Waterlogic Hot Tanks have a built in Vent or Expansion Chamber in the top of the tank except for WL270 (GF) units.</p> <p>The Vent Chamber allows for expansion of the water when it is heated.</p> <p>The chambers are separated by a welded-in tank baffle.</p> <p>Water always flows into the bottom of the Hot Tank and out the top to the Faucet.</p> <p>The Hot Tank Outlet Tube has a Restrictor in its base. This ensures the reservoir is always full by allowing more water in than out.</p> <p>There is a small hole in the side of the Hot Tank Outlet Tube that allows air and water to pass into the Vent Chamber as it is heated.</p> <p>Water in the Vent Chamber is suctioned back through the Outlet Tube vent hole when water is dispensed.</p> <p>Expansion of water as it is heated in the Reservoir will push the water out the faucet when the outlet tube vent hole becomes plugged with debris or scale.</p> <p>The small Outlet Vent Hole is susceptible to scale build up and is a key indicator that descaling is required.</p> <p>It is critical to descale the Hot Tank through the vent line and outlet line on a regular basis to prevent this problem.</p> <p>Descaling through the inlet and/or outlet lines only will not clean the vent chamber and outlet vent hole properly.</p>


10. Dispenses Hot and Cold Water at the same time

Possible Reason	Solution
<p>Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.</p>	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button “click”.</p> <p>Adjust water pressure to 40-60 psi.</p>
<p>Hot or Cold solenoid is stuck open.</p>	<p>Remove Top Cover.</p> <p>Check Hot Solenoid: Dispense cold water and visually inspect tubing for water flow from both tanks.</p> <p>Check Cold Solenoid: Disconnect Elbow from outlet of Cold Solenoid. Select hot water and dispense (quickly releasing Dispensing Button to avoid much water coming out of Cold Solenoid.</p> <p>Replace Solenoid as necessary.</p>

11. No Cold Water Available

Possible Reason	Solution
Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button “click”.</p> <p>Adjust water pressure to 40-60 psi.</p>
Closed Water Supply Valve	Open the Water Supply Valve
Cold Water Solenoid Valve malfunction	Inspect the valve components for proper functionality.
Red Heater & Compressor Switch on unit is off.	<p>If water is dispensing at room temperature:</p> <p>Turn Red Heater & Compressor Switch on. <i>I = ON</i></p> 
Loose connection(s) on the Display PCB	<p>Turn power off; unplug the WL350 Water Treatment System and visually inspect solenoid connections into the Display PCB. Verify the soldering points on connections are secure into the board.</p> <p>Remove the PCB to inspect the front of the board.</p>
Exhausted Filter	Replace filters as needed.

12. Water does not dispense from Unit

Possible Reason	Solution
Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button “click”.</p> <p>Adjust water pressure to 40-60 psi.</p>
Closed water supply valve	Open the water supply valve.
The unit is not properly plugged into electrical outlet	Check electrical outlet connection, or for blown circuit breaker.
Red Heater & Compressor Switch button on unit is in the off position	<p>Turn Red Heater & Compressor Switch on. <i>I = ON</i></p> 
15 Amp Fuse Blown	Replace the 15 Amp Fuse as needed.
Water is present in the Bottom Tray, causing the Leak Detection to trigger	Remove the Top Cover and Front Panel. Tip the unit slightly to drain, dry Bottom Tray completely.
Hot and Cold Solenoid connections into the Display PCB are loose.	<p>Turn power off; unplug the WL350 Water Treatment System and visually inspect Solenoid connections into the Display PCB. Verify the soldering points on connections are secure into the board.</p> <p>Remove the PCB to inspect the front of the board.</p>
Exhausted Filter	Replace filters as needed.

13. No Water is Dispensing from One Side – Cold or Hot

Possible Reason	Solution
<p>Too much water pressure.</p> <p>Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.</p>	<p>Verify water pressure at the Inlet Bulkhead with a Pressure Regulator.</p> <p>Additional method of verification is to turn off water to unit and press the Dispense Button. Does the Solenoid open without water pressure to the unit? Listen for solenoid to activate, not the Dispense Button “click”.</p> <p>Adjust water pressure to 40-60 psi. <i>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</i></p>
PCB	<p>Switch the hot and cold wires on PCB (red and blue connections).</p> <p>If water now dispenses from the opposite side, this is an indication that there is a PCB problem.</p> <p>Replace PCB</p>
Solenoid	<p>If both the Water Pressure and PCB have been ruled out, then it is the Solenoid.</p> <p>Replace Solenoid.</p>
See “Green Flashing Light” Fault Code Section of this Manual	Indicates the Firewall UV system is not detecting adequate dose of UV to ensure safe water.

14. Cold Water Dispenses from Faucet and Vent Outlet Simultaneously

Possible Reason	Solution
Improper tubing attachment from the Cold Tank to Faucet or vice versa	Verify tubing is connected properly from Cold Tank Outlets to correct Faucet attachments.
Scale has formed inside Cold Tank outlet tube.	Remove Cold Water Outlet Tube from Cold Tank to Faucet. Pour some scale remover into Cold Tank.
Expansion chamber in Cold Tank is not sealed properly.	Replace Cold Tank.


15. Small Amount of Water Periodically Dispenses from Faucet Automatically

Possible Reason	Solution
<p>Too much water pressure. Recommend 40 to 60 psi for the WL350 Water Treatment System to operate properly.</p>	<p>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</p> <p>Check water pressure at the inlet bulkhead with a water pressure gauge.</p> <p>Additional method of verification is to turn off water to unit and press the dispense button. Does the solenoid open without water pressure to the unit? Listen for solenoid to activate, not button “click”.</p> <p>Adjust water pressure to 40-60 psi.</p>
<p>Cold or Hot Water solenoid valve malfunction</p>	<p>Inspect valve components for proper function. Replace as necessary.</p>
<p>Obstruction in solenoid housing is preventing proper sealing of component.</p>	<p>Pre-determine whether water being dispensed is hot or cold.</p> <p>Isolate the water supply; push the DISPENSE button to release the line pressure, and remove the coil affixed to the solenoid stem.</p> <p>Remove the stem from the solenoid housing and allow water from the tank to flush out the contaminant(s).</p>

16. Dispense Buttons Stick

Possible Reason	Solution
<p>Dirt or Foreign material is filling the gap around the Dispense Buttons.</p>	<p>Inspect the Dispense Buttons and clean surrounding area. Inspect Faucet Assembly inside the WL350 Water Treatment System and clean as necessary.</p>

17. Water Streams at an Angle

	Solution
	<p>Rotate the Bung (Blue Silicone) and the JG fittings a few degrees.</p>
<p>Water Feed Pressure</p>	<p>Verify the Incoming Feed with a Pressure Regulator. Should be 40-60 psi (275-414 kPa) – Use Pressure Regulator</p> <p><i>The correct input water pressure is critical to the performance of the unit to allow solenoids to open.</i></p>
<p>Outgoing Flow Rate</p>	<p>Verify the outgoing Flow Rate. Should be 1.89 Liters per minute (0.5 gallons per minute) - Firewall Purification.</p> <p>Dispense water for one minute – should measure 1.89 Liters (0.5 gallons) per minute</p> <p>Change Flow Restrictor if needed.</p>

18. Run On – Water continues to dispense out of faucet after releasing the dispense button

Reason

“Run On” or “Carry On” is present in all Waterlogic pressure fed units without outlet solenoids.

“Run On” is defined as the amount of water that continues to dispense out of the faucet after releasing the dispense button.

Run On exists because the tanks pressurize as water is being dispensed. Every Waterlogic tank has an outlet restrictor to ensure the tanks remain full of water and water is controlled as it is released to the faucet. The inlet solenoid controls flow into the tanks. The tanks will “depressurize” once the dispense button is released the inlet solenoid closes. A small amount of water will “Run On” through the faucet as the tank depressurizes to atmospheric conditions.

Typical “Run On” is 2-3 seconds.

“Run On” can be reduced by installing a pressure limiting device.

The amount of inlet or supply pressure directly impacts the amount of “Run On” as quantified below.

WLCP Lab Testing of Rn On 7-31-2013

Pressure	Pressure	Time	Flow Rate	Run On
Static PSI	Dynamic PSI	4 Liters	l/min	Seconds
68	40	61	2.9508197	3
50	30	72	2.5	2.5
32	20	92	1.956217	2

Pressure measured at inlet line to unit. Static with unit closed. Dynamic with unit dispensing cold water.

No filters were installed in unit.

HOT TANK DESCALING INSTRUCTIONS

The Hot Tank requires removal of mineral deposits (descaling) on a regular basis. Typically descaling should take place every 6 to 12 months to preserve the long-term health of your unit.

Use non-toxic cleaner such as ScaleKleen, DEZCAL, 20% Citric Acid Solution, or Undiluted Vinegar Solution to remove mineral deposits as directed by the manufacturer depending upon filtration and local water conditions.

Descaling is an important process that removes calcium deposits, or scale, that can build up inside a tank over time. Calcium and scale is non-toxic but left unattended will hinder your unit's performance.

⚠️ WARNING! ***PERSONAL PROTECTIVE EQUIPMENT REQUIRED.** Always ensure proper ventilation and use rubber or nitrile gloves and eye protection when using chemicals. Refer to Material Safety Data Sheet for specific requirements of each product.*

⚠️ CAUTION! ***STAINLESS STEEL TANK DESCALING.** The Hot Tank is made from stainless steel. Ensure descaling solution is compatible with stainless and always flush the unit completely. Dispose in an environmentally safe manner.*

Materials Needed:

- Personal Protective Equipment. Rubber or Nitrile Safety Gloves and Protective Eyewear
 - Phillips Screwdriver
 - Temperature Gauge
 - Water Pitcher or Container to collect water from the faucet
 - 19 Liter (5 Gallon) container or drain basin
 - Citric Acid Based Cleaner
 - ¼" Plastic Tubing, at least 4 feet in length, and assorted ¼" quick connect fittings
 - Sanitizing Cartridge
 - Food Coloring
9. Put descaler per directions and 3 drops of food coloring into the descaling cartridge.
 10. Connect descaling cartridge to the inlet water supply and connect to inlet bulkhead fitting on the back of the **WL350 Water Treatment System**. Turn on Water Supply.
 11. Select Hot Water and depress the Main Dispensing Button on the Front Control Panel until descaling solution (colored water) comes out of the faucet. Container and drain basic will be required to catch water from the faucet.
 12. Turn off water supply and remove sanitizing cartridge from inlet water supply. Reconnect water supply to inlet fitting.

13. Allow descaling solution to remain in the Hot Tank for 15 minutes (length of time may vary depending on water conditions).
14. Place a pitcher, catch basin or other container under the faucet of the **WL350 Water Treatment System**.
15. Flush the Hot Tank until water runs clear.
16. Once clear Water dispenses from the faucet the Hot Tank has been descaled. Always ensure the **WL350 Water Treatment System** is performing to the customer's satisfaction.

⚠ WARNING! HOT WATER. *The WL350 Water Treatment System produces Hot Water up to 87°C (187°F). Water above 52°C (125°F) can cause severe burns or scalding. Hot water should be dispensed carefully into insulated container to avoid injury.*

⚠ CAUTION! MUST REPLACE HOT TANK 3-5 YEARS DEPENDING ON USAGE. *The Hot Tank and its controls must be replaced a minimum of every three to five years to ensure efficient and dependable operation.*

⚠ WARNING! REINSTALL ALL PANELS AND COVERS. *Always reinstall all Panels, Protective covers, and fasteners after servicing equipment. Failure to do so could result in severe personal injury and will void the certifications and warranty of the equipment.*