


## PROGRAMMING INSTRUCTIONS

### FILTER LIFE TIMER



**WL7 FW** is equipped with a filter timer system that can be turned on to alert the user when a filter change is due. Filter timer default is OFF, and status is displayed in the maintenance screen. The Filter timer options are; OFF, 3, 6, or 12 months. Adjust Dual Inline Package (DIP) Switch 4 (DP4) on the Main PCB.

### WL7 MAIN PCB DIP SWITCHES

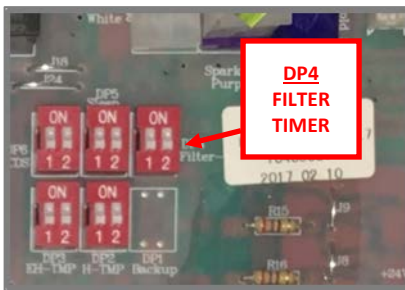

### FILTER TIMER OFF = DEFAULT



1 OFF  
2 OFF

### FILTER TIMER 3 MONTHS



1 OFF  
2 ON

### FILTER TIMER 6 MONTHS



1 ON  
2 OFF

### FILTER TIMER 12 MONTHS



1 ON  
2 ON

### FILTER LIFE TIMER ICON



The filter timer alert icon will appear in the dispense screen and maintenance screens if timer is enabled and the specified time has elapsed.



We recommend leaving the filter timer off to reduce unnecessary alerts and service calls.

### FILTER TIMER RESET



Enter maintenance screen by selecting ambient and tapping dispense 5 times in 5 seconds.

Press and hold the dispense button for approximately 5 seconds until you hear single beep.

The filter icon will flash, and the unit will beep one time to confirm filter timer reset.

Release the dispense button after beep confirming filter timer is reset or continue to hold if you wish to reset the bottle counter at the same time.

Tap dispense button 5 times in 10 seconds to exit maintenance mode and return to main dispenses screen.