

SERVICE REQUIREMENTS

MARNING! Read and understand the contents of this manual before attempting to service the PUREZZA FIZZ 80 Water Treatment System. Failure to follow the instructions in this manual could result in death, serious personal injury, or severe property damage. Only trained and qualified technicians should attempt to install, maintain, or service Waterlogic Equipment.

<u>DANGER!</u> HIGH VOLTAGE ELECTRICAL HAZARD. Unplug before inspection and service.

SANITIZATION OF SURFACES IN CONTACT WITH DRINKING WATER

The sanitization of the drinking water circuit has to be performed:

- Every time unit Is installed
- Every 6 months of operation
- Each Change of filters
- After system has been inoperative of 5 days or more.
- 1. Turn off incoming feed water.
- 2. Remove Filter Cartridge.
- Mix ½ gallon of sanitizer per directions or use Bleach Solution (1 teaspoon = 1/6 oz. = 5 ml = ½ cap full) of household bleach (Sodium Hypochlorite 5 10% Concentration) with 1/2 gallon of water. Always ensure sanitizer is compatible with stainless steel and acetyl plastic.
- 4. Open the water entering the machine and take approximately 5 liters of still water and 5 liters of sparkling water.
- 5. Keep the sanitizing solution in circuit for 20 minutes.
- 6. Install new filter cartridge.
- 7. Take 10 liters of still water and 10 liters of sparkling water to rinse the circuit.

WARNING! SANITIZER MAY CONTAIN HAZARDOUS CHEMICALS. Use of proper personal protective equipment such as rubber gloves and eye protection is required.



CO2 CYLINDER REPLACEMENT

The replacement of the CO2 cylinder must be done when it is empty. The pressure gauge of the pressure regulator is near to "0".

Close the cylinder to be replaced by turning the valve clockwise, located on the cylinder head.

Unscrew the nozzle that connects the exit of the cylinder to the pressure regulator.

Insert new cylinder to the nozzle that connects the exit of the cylinder to the pressure regulator making sure to seal.

Open the tank by turning the knob counter-clockwise on the cylinder 2 full turns.



| Component | Part Number |
|-------------------------|-------------|
| Motor Fan | |
| 120 x 120 x 25 mm | 100002622 |
| 4.8 x 4.8 x 1 inch | |
| Boost Pump | 100002623 |
| Level Controller | 100002624 |
| Power Switch | 100002625 |
| Ice Bank Thermostat | 100002626 |
| Unit Feet | 100002627 |
| Submerged Agitator Pump | 100002629 |

SPARE PARTS


Spare parts can be obtained from *Waterlogic* or an *Authorized Waterlogic Dealer*.


NOTE:

At the **end of this product's life**, ensure that it is disposed of in an environmentally friendly manner which is fully compliant **with all Federal/State/Local Requirements and Guidelines.**



TECHNICAL DATA PLATE

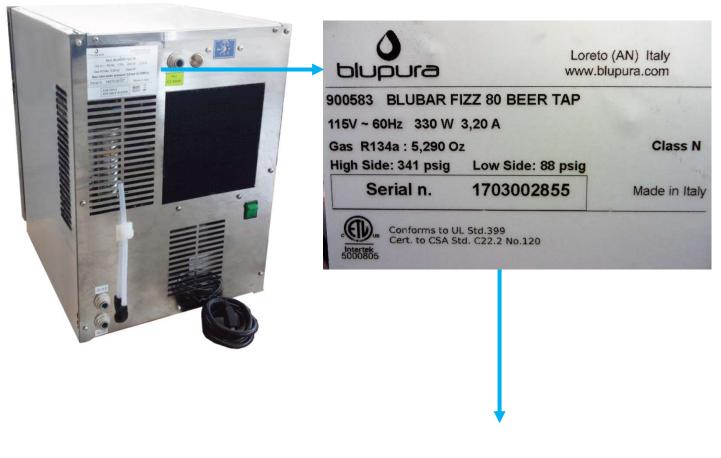

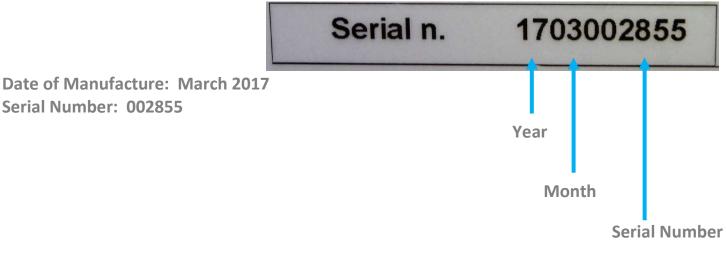



PUREZZA REAR VIEW



| 1 | Ice Bank Inlet Pipe Joint 3/8" Diameter |
|---|--|
| 2 | Adjustable Thermostat |
| 3 | Power Switch |
| 4 | Power Cord |
| 5 | Ice Bank Level |
| 6 | CO ₂ Inlet Bulkhead Joint ¼" Diameter |
| 7 | Supply Water (Feed Water) Inlet Bulkhead ¼" Diameter |



ADJUSTING COLD TEMPERATURE

- 1. Set temperature between 5 and 6.
- 2. If you want to avoid the formation of ice in the bank, turn the thermostat screw at least 1/4 turn counter-clockwise.

<u>NOTE</u>: Before making any changes to the temperature, ensure that the unit has been running for 1 hour to build a full ice bank in the cooling system



Thermostat